
# **NE-4100 Series**

# -10/100 Mbps embedded serial device servers

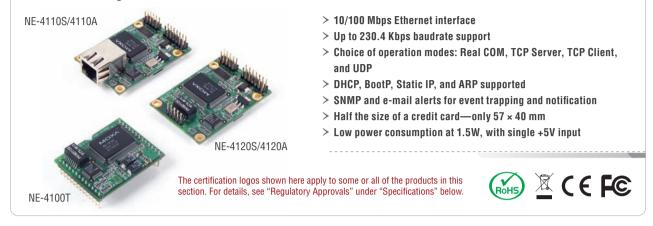

### **Overview**

Moxa's NE-4100 embedded device servers are designed for manufacturers who want to add sophisticated network connectivity to their serial devices. Moxa's embedded device servers can be used to convert any device with a standard serial interface to an Ethernetenabled device in no time. The NE-4100 embedded device servers support 10/100 Mbps Ethernet, and provide ready-to-use operation modes, including TCP Server, TCP Client, and UDP. In addition, a Real COM driver is included for backward compatibility with legacy software.


### **SNMP and E-mail Alerts for Event Trap and Notification**

NE-4100 embedded device servers can be configured to send an SNMP trap or e-mail under the following conditions:

- Cold/warm start
- Password authentication failure

- Change in DSR/DCD line signal
- Change in IP address
- Change in password
- On-site Configuration with Serial Command Mode
- · Easy on-site configuration of network settings
- Simple command frame format
- · Comprehensive command set for serial and network configuration
- Easily switch between software and hardware triggers
- Software reset

# **:** Typical Installation Examples

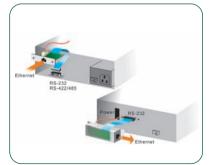

**NE-4110:** RJ45 Ethernet connector in stand-alone form factor



**NE-4120:** Pin-header Ethernet in stand-alone form factor




**NE-4100T:** Dual-in-line pin header in drop-in form factor

# **Powerful, User-friendly Utilities**

### Web-based Configuration

NE-4100 embedded device servers can be configured with the web console, which can be accessed from the web browser of any networked computer.

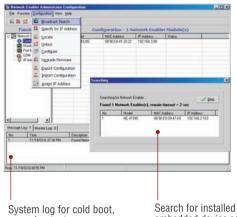

- warm boot, etc.
- embedded device servers

### Configure and manage embedded device servers with Moxa's Windows Utility

Network Enabler Administrator is a powerful, Windows-based configuration and management tool for NE-4100 embedded device servers. With Network Enabler Administrator, users can modify IP addresses, update communication parameters, and configure all other settings over the network. This utility has the following useful features:

- · Search your LAN for embedded device servers
- Export and import configuration parameters •
- Upgrade firmware over the network
- Remotely monitor data traffic, serial line status, • and TCP/IP connections
- Configure SNMP and e-mail alerts ٠

Basic Network Sensi Operating Mode Accessible Ps Auto Warning IP-Address Report Password Digital ID		
E-Mail and SNMP Trap Settings Event   Postevoral   Digital to		
Masty		
Mail Server mail.abc.com		
From E-Mail Address: andy@mail.sbc.com		
To E-Mail Address 1. mary@mail.ebc.com		
To E-Mail Address 2		
To E-Mail Address 3		
To E-Mail Address 4		
() Modły		
Mel Server Authentication Server		
() Modily		
Tinp Server		

### **NE-4100 Starter Kit**


The Network Enabler Starter Kit includes an evaluation board, power adaptor, software, and serial and Ethernet cables to allow quick and easy evaluation of all embedded device server functions. The evaluation board is equipped with serial, Ethernet, digital I/O, and power circuits to help you test your modules and applications.







### **Dimensions and Pin Assignment**

### NE-4110S/4110A

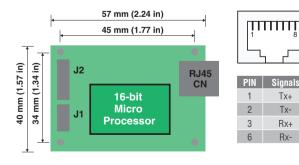

### NE-4120S/4120A

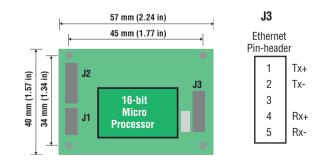

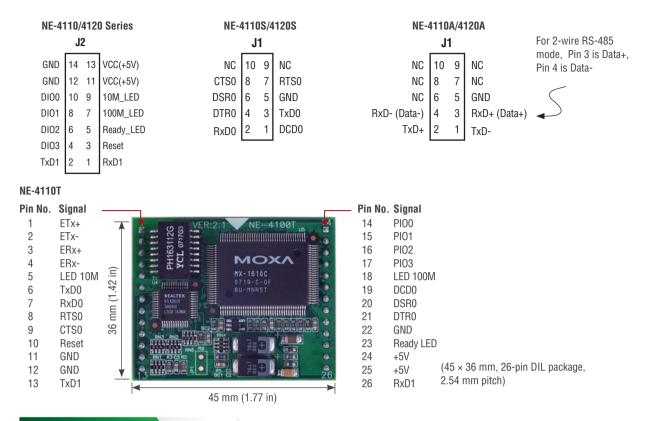

# **Specifications**

### **Form Factor**

#### Type:

NE-4110/4120: Ready-to-go stand-alone modules NE-4100T: 26-pin dual-in-line package

#### Dimensions:

NE-4110/4120: 57 × 40 mm (2.24 x 1.57 in) NE-4100T: 45 × 36 mm (1.77 x 1.42 in)

#### Weight:

NE-4110S/4110A: 40 g NE-4120S/4120A/4100T: 20 g

### Ethernet Interface

Number of Ports: 1

Speed: 10/100 Mbps, auto MDI/MDIX

### Connector:

NE-4110 Series: RJ45 NE-4120 Series: 5-pin pin header NE-4100T: 26-pin dual-in-line

Magnetic Isolation Protection: 1.5 KV built-in Serial Interface

# Number of Ports: 2

### Serial Standards:

Port 1: NE-4110S/4120S: RS-232 NE-4110A/4120A: RS-422, RS-485-4w, RS-485-2w NE-4100T: TTL Port 2: TTL console port

 $\textbf{RS-485 Flow Control: ADDC} \ensuremath{\mathbb{R}} \ensuremath{\text{(automatic data direction control)}}$ 

### **Serial Communication Parameters**

Data Bits: 5, 6, 7, 8 Stop Bits: 1, 1.5, 2 Parity: None, Even, Odd, Space, Mark Flow Control: DSR/DTR and RTS/CTS (RS-232 only), XON/XOFF Baudrate: 110 bps to 230.4 Kbps

### Serial Signals

### TTL:

Port 1: TxD, RxD, RTS, CTS, DTR, DSR, DCD, GND Port 2: TxD, RxD, GND **RS-232:** TxD, RxD, RTS, CTS, DTR, DSR, DCD, GND **RS-422:** Tx+, Tx-, Rx+, Rx-, GND **RS-485-4w:** Tx+, Tx-, Rx+, Rx-, GND **RS-485-2w:** Data+, Data-, GND

### **Digital I/O Pins**

**GPIO:** 4 programmable I/O pins

### Software

Network Protocols: ICMP, ARP, IP, TCP, UDP, DHCP, Telnet, HTTP, SNMP V1/V2c, SMTP

**Configuration Options:** Web Console, Serial Console, Telnet Console, Windows Utility

Windows Real COM Drivers: Windows 95, 98, ME, NT, 2000, XP x86/x64, 2003 x86/x64, Vista x86/x64, 2008 x86/x64, Embedded CE 5.0/6.0, XP Embedded

**Fixed TTY Drivers:** SCO Unix, SCO OpenServer, UnixWare 7, UnixWare 2.1, SVR 4.2, QNX 4.25, QNX 6, Solaris 10, FreeBSD, AIX 5.x, HP-UX 11i

Linux Real TTY Drivers: Linux kernel 2.4.x, 2.6.x Operation Modes: Real COM, TCP Server, TCP Client, UDP

# Environmental Limits

Operating Temperature: Standard Models: 0 to 55°C (32 to 131°F) Wide Temp. Models: -40 to 75°C (-40 to 167°F) Operating Humidity: 5 to 95% RH Storage Temperature: -20 to 70°C (-4 to 158°F)

### **Power Requirements**

Input Voltage: 5 VDC (±5%) Power Consumption: 290 mA @ 5 VDC max.

**Regulatory Approvals** 

EMC: CE EN55022 Class A, FCC Part 15 Subpart B Class A

Reliability

Automatic Reboot Trigger: Built-in WDT (watchdog timer)

### MTBF (meantime between failures):

NE-4100T: 288173 hrs NE-4110A: 289573 hrs NE-4110S: 290276 hrs NE-4120A: 289573 hrs NE-4120S: 285874 hrs

# Warranty

Warranty Period: 5 years Details: See www.moxa.com/warranty

### **Crdering Information**

### **Available Modules**

 $\ensuremath{\text{NE-4110S:}}$  Device server module for RS-232 devices, supports 10/100BaseT(x) with RJ45 connector

 $\mbox{NE-4110A:}$  Device server module for RS-422/485 devices, supports 10/100BaseT(x) with RJ45 connector

 $\mbox{NE-4120S:}$  Device server module for RS-232 devices, supports 10/100BaseT(x) with 5-pin Ethernet pin header

 $\mbox{NE-4120A:}$  Device server module for RS-422/485 devices, supports 10/100BaseT(x) with 5-pin Ethernet pin header

 $\ensuremath{\mathsf{NE-4100T}}$  : Device server module for TTL devices, supports 10/100BaseT(x) with DIL package

### **Available Starter Kits**

**NE-4110-ST:** Starter kit for the NE-4110S and NE-4110A **NE-4120-ST:** Starter kit for the NE-4120S and NE-4120A **NE-4100-ST:** Starter kit for the NE-4100T

### Package Checklist (modules)

NE-4100 series module

### Package Checklist (starter kits)

- NE-4100-ST or NE-4110-ST or NE-4120-ST evaluation board
- Universal power adaptor
- 2 power cords
- Null modem cable
- Cross-over Ethernet cable
- Document and Software CD
- Quick Installation Guide (printed)
- Warranty Card