

Digital I/O Unit with Opto-Isolation for USB

DIO-6464LX-USB



* Specifications, color and design of the products are subject to change without notice.

This product is an USB2.0-compliant digital I/O unit used to provide a digital signal I/O function on a PC.

This product can input and output digital signals at 12 - 24VDC. This product features 64 channels of Optocoupler isolated inputs (compatible with current sink output) and 64 channels of Optocoupler isolated open-collector outputs (current sink type). You can use 16 input signals as interrupt inputs. Equipped with the digital filter function to prevent wrong recognition of input signals and output transistor protection circuit (surge voltage protection and over current protection).

As there is compatible with PCI bus-compatible board PIO-64/64L(PCI)H and PCI Express bus-compatible board DIO-6464L-PE in terms of connector shape and pin assignments, it is easy to migrate from the existing system.

Windows driver is bundled with this product. Possible to be used as a data recording device for LabVIEW, with dedicated libraries.

Features

Optocoupler isolated input (compatible with current sink 64 channels of Optocoupler isolated inputs (compatible with current sink output) and 64 channels of Optocoupler isolated open-collector outputs (current sink type)

This product has the 64 channels of Optocoupler isolated inputs (compatible with current sink output) and the 64 channels of Optocoupler isolated open-collector outputs (current sink type) whose response speed is 200µsec. Supporting driver voltages of 12 - 24 VDC for I/O. (12 - 24VDC external circuit power supply is required separately.)


Compatible to USB1.1/USB2.0

Compatible to USB1.1/USB2.0 and capable to achieve high speed transfer at HighSpeed (480 Mbps).

USB HUB function

This product has the USB HUB function. Max. 4 DIO-6464LX-USB can be used in 1 USB port of PC. When you use 4 or more DIO-6464LX-USB, you can do by connecting DIO-6464LX-USB to the another USB port of PC

Also, you can connect the CONTEC's USB device other than DIO-6464LX-USB to the USB port of DIO-6464LX-USB. *1*2

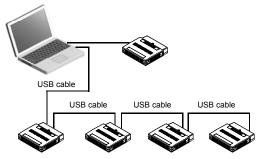

Common terminal provided per 16 channels

Common terminal provided per 16 channels, capable of supporting a different external power supply.

Optocoupler bus isolation

As the USB (PC) is isolated from the input and output interfaces by Optocouplers, this product has excellent noise performance.

You can use 16 input signals as interrupt request signals. You can use 16 input signals as interrupt request signals and

also disable or enable the interrupt in bit units and select the edge of the input signals, at which to generate an interrupt..

This product has a digital filter to prevent wrong recognition of input signals from carrying noise or a chattering.

This product has a digital filter to prevent wrong recognition of input signals from carrying noise or a chattering. All input terminals can be added a digital filter, and the setting can be performed by software.

Output circuits include zener diodes for surge voltage protection and poly-switches for overcurrent protection.

Zener diodes are connected to the output circuits to protect against surge voltages. Similarly, polyswitches are fitted to each group of 8channels outputs for over-current protection. The output rating is max. 35VDC, 100mA per channel.

Connectors are compatible with PCI/PCI Express bus-compatible board

As there is compatible with PIO-64/64L(PCI)H and DIO-6464L-PE in terms of connector shape and pin assignments, it is easy to migrate from the existing system. If the system of this product is created by the digital I/O driver API-DIO(98/PC), it is required to replace it with API-DIO(WDM).

Windows compatible driver libraries are attached.

Using the attached digital I/O driver API-DIO(WDM) makes it possible to create applications of Windows. In addition, a diagnostic program by which the operations of hardware can be checked is provided.

LabVIEW is supported by a plug-in of dedicated library VI-DAQ.

Using the dedicated library VI-DAQ makes it possible to make a LabVIEW application.

- Do not connect the device other than that of CONTEC's USB to the USB port included on
- the DIO-6464LX-USB. Otherwise, this may cause a failure or malfunction. When connecting multiple units with USB HUB function and set up them, do one at a time and complete setup for the previous unit before starting to do the next unit.



Specification

	Item	Specification				
Input section						
Number	of input signal	64 channels (16 channels available for interrupts)				
channels		(1 common in 16 channels unit)				
Input for	mat	Optocoupler isolated input (Compatible with current sink output) (Negative logic *1)				
Input res	sistance	4.7kΩ				
Input ON	l current	2.0mA or more				
Input OF	F current	0.16mA or less				
Interrupt		16 interrupt input signals are arranged into a single output of interrupt request signal INTA. An interrupt is generated at the rising edge (HIGH-to-LOW transition) or falling edge (LOW-to-HIGH transition) (set by software).				
Respons		200μsec within *2				
Output section						
channels		64 channels (1 common in 16 channels unit)				
Output fo	ormat	Optocoupler isolated open collector output (current sink type) (Negative logic*1)				
Output	Output voltage	35VDC (Max.)				
rating	Output current	100mA (per channel) (Max.)				
Residua	voltage with	0.5V or less (Output current≤50mA), 1.0V or less (Output				
output or	n	current≤100mA)				
Surge pr	otector	Zener diode RD47FM(NEC) or equivalent				
Respons	se time	200µsec within *2				
USB section						
Bus spec	cification	USB Specification 2.0/1.1 standard				
USB tran	nsfer rate	12Mbps (Full-speed), 480Mbps (High-speed) *3				
Power si	vlagu	Self-power				
Common sec						
Number	of terminals	127 terminals (Max.) *4				
used at t	he same time	,				
Dielectric	c strength	250Vrms				
External supply*5	circuit power	12 - 24VDC (±10%)				
	consumption	5VDC 550mA				
	g conditions	0 - 50°C, 10 - 90%RH (No condensation)				
Allowabl	e distance of	Approx. 50m (depending on wiring environment)				
signal ex	tension	, , , , , , , , , , , , , , , , , , , ,				
Physical (mm)	dimensions	180(W) x 140(D) x 34(H) (No protrusions)				
Weight		300g (Not including the USB cable, attachment)				
Connect	or	100 pin 0.8mm pitch connector [F (female) type] x 2 HDRA-E100W1LFDT1EC-SL+[HONDA TSUSHIN KOGYO CO., LTD.] or equivalent to it				
		USB cable 1.8m				

- Data "0" and "1" correspond to the High and Low levels, respectively. The Optocoupler's response time comes.
- This depends on the PC environment used (OS and USB host controller)
- As a USB hub is also counted as one device, you cannot just connect 127 USB unit.
- External circuit power supply is required separately.

Support Software

Windows version of digital I/O driver API-DIO(WDM) [Stored on the bundled CD-ROM driver library API-USBP(WDM)1

It is the library software, and which supplies command of hardware produced by our company in the form of standard Win32 API function (DLL). Using programming languages supporting Win32API functions, such as Visual Basic and Visual C++ etc., you can develop high-speed application software with feature of hardware produced by our company. In addition, you can verify the operation of hardware using Diagnostic programs.

< Operating environment >

Windows 7, Vista, XP, Server 2003, O.S

2000. Me. 98

Adaptation language Visual Basic, Visual C++, Visual C#,

Delphi, C++ Builder

For more details on the supported OS, applicable language and how to download the updated version, please visit the CONTEC's Web site (http://www.contec.com/apiusbp/).

Data acquisition VI library for LabVIEW VI-DAQ (Available for downloading (free of charge) from the CONTEC web

This is a VI library to use in National Instruments LabVIEW. VI-DAQ is created with a function form similar to that of LabVIEW's Data Acquisition VI, allowing you to use various devices without complicated settings.

See http://www.contec.com/vidag/ for details and download of VI-DAQ.

Cable & Connector

Cable (Option)

Shielded Cable With Two 100pin Connector

: PCB100PS-0.5 (0.5m), PCB100PS-1.5 (1.5m), PCB100PS-3 (3m), PCB100PS-5 (5m)

Connection Conversion Shield Cable (100P→96P)

: PCB100/96PS-1.5 (1.5m), PCB100/96PS-3 (3m), PCB100/96PS-5 (5m)

Flat Cable with One 100-Pin Connector

: PCA100P-1.5 (1.5m), PCA100P-3 (3m), PCA100P-5 (5m)

Connection Conversion Shield Cable (100P→37P D-SUB x 2)

- : PCB100WS-1.5 (1.5m), PCB100WS-3 (3m), PCB100WS-5 (5m)
- If using both the CNA and CNB connectors, two cable sets are required.

Accessories

Accessories (Option)

Screw Terminal Unit (M3 x 100P) : EPD-100A *1*4*6 Screw Terminal Unit (M3 x 96P) : EPD-96A *2*4*6 Screw Terminal Unit (M3.5 x 96P) : EPD-96 *2*4 : DTP-64(PC) *2*4 Terminal Unit for Cables (M2.5 x 96P)

Connector Conversion Board (96-Pin→37-Pin x 2)

CCB-96 *2*4

Signal Monitor / Output Accessory for Digital I/O (64P)

CM-64(PC)E *2*4

Screw Terminal Unit (M3 x 37P) : EPD-37A *3*5*6 Screw Terminal Unit (M3.5 x 37P) : EPD-37 *3*5 General Purpose Terminal (M3 x 37P) : DTP-3A *3*5 Screw Terminal (M2.6 x 37P) : DTP-4A *3*5 AC adapter (input: 90 - 264VAC, output: 5VDC 2.0A) : POA200-20 *7 USB I/O Unit Bracket for X Series

: BRK-USB-X

*1 PCB100PS optional cable is required separately.

- *2 PCB100/96PS optional cable is required separately.
- PCB100WS optional cable is required separately.
- If using both the CNA and CNB connectors, two each of the terminal block and cable sets are required.
- *5 If using both the CNA and CNB connectors, two cable sets are required

You will also require sufficient terminal blocks for the number of I/O points you are using

- "Spring-up" type terminal is used to prevent terminal screws from falling off.
- It is the same as the one appended to the product. Please buy it necessary for
- Check the CONTEC's Web site for more information on these options



Packing List

Unit [DIO-6464LX-USB] ...1

AC adapter ...1

AC Cable (for 125VAC) ...1

USB cable (1.8m) ...1

USB cable attachment on the main unit's side

(For Mini B connector side) ...1

Clamps for prevention of cable on the main unit's side...1

CD-ROM *1 [API-USBP(WDM)] ...1


Power connector MC1,5/3-ST-3,5 ...1

First step guide ...1


Ferrite core ...1

*1 The CD-ROM contains the driver software and User's Guide.

Block Diagram

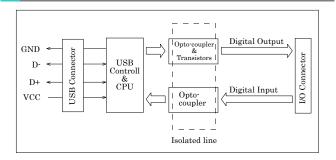


Physical Dimensions

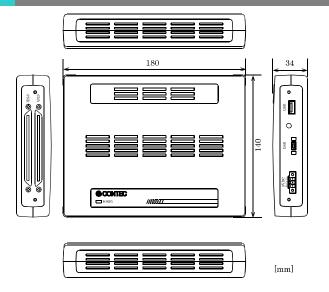

Using the Connectors

Connecting to a Connector

To connect an external device to this product, plug the cable from the device into the interface connector (CN1) of unit shown below.



Please refer to page 2 for more information on the supported cable and accessories.

Connector Pin Assignment

Pin Assignments of DIO-6464LX-USB Interface Connector (CNA, CNB)

	¬, ∪		-,													
Common plus pin	P-E/F	100				50	P-A/B	Common plus pin		N.C.	1			51	N.C.	
for +E/+F	n nen					-	D 4 /D	for +A/+B		V. 0				-	N. O	
output	P-E/F	99				49	P-A/B	output			2			52	N.C.	
	O·F7	98				48	O-B7			_	3			53	N.C.	
	O-F6	97				47	O-B6			_	4			54	N.C.	
	O-F5 O-F4	96 95				46 45	O-B5	_	-	_	6			55	N.C.	
+F port (Output)	O-F3	94				44	O-B4 O-B3	+B port (Output)			7			56 57	N.C. I-40	
-	O-F2	93				43	O-B2	-			8			58	I-41	
	O-F1	92				42	O-B1			_	9			59	I-42	
	O-F0	91				41	O-B0		+0 port	*	10			60	I-43	+4 port
	O·E7	90				40	O-A7		(Input)		11			61	I-44	(Input)
	O-E6	89				39	O-A6				12			62	I-45	
	O-E5	88		CNB	٦	38	O-A5				13	CNA	_	63	I-46	
+E port (Output)	O•E4	87	100	$\overline{}$	-50	37	O-A4	+A port (Output)			14	\checkmark	- 51	64	I-47	
(Output)	O·E3	86 85				36 35	O-A3 O-A2	(Оптрит)			15 16			65 66	I-50 I-51	
	O-E2	84				34	O-A1				17			67	I-52	
	O-E0	83				33	O-A0		+1 port	_	18			68	I-53	+5 port
	N-E/F	82				32	N-A/B		(Input)	-	19			69	I-54	(Input)
	N-E/F	81				31	N-A/B				20			70	I-55	
Common minus	N-E/F	80				30	N-A/B	Common minus		*	21			71	I-56	
pin for +E/+F	N-E/F	79				29	N-A/B	pin for +A/+B		* :	22			72	I-57	
output ports	N-E/F	78				28	N-A/B	output ports	Common plus pin for	P-0/1	23			73	P-4/5	Commo plus pin for
	N-E/F	77				27	N-A/B		+0/+1 input	P-0/1	24			74	P-4/5	+4/+5 input
	N.C.	76				26	N.C.			-	25			75	N.C.	
	N.C.	75				25	N.C.			N.C.	26			76	N.C.	
Common plus pin for	P-C/D	74				24	P-8/9	Common plus pin for		N.C.	27			77	N.C.	
+C/+D output	P•C/D	73				23	P-8/9	+8/+9 output			28			78	N.C.	
	O-D7	72				22	O-97			_	29			79	N.C.	
	O·D6 O·D5	71 70				21 20	O-96 O-95		-		30			80 81	N.C.	
+D port	O-D5	69				19	O-95	+9 port	-	-	32			82	N.C.	
(Output)	O-D4	68				18	0-93	(Output)			33			83	I-60	
	O-D2	67				17	O-92			-	34			84	I-61	
	O-D1	66				16	O-91			I-22	35			85	I-62	
	O-D0	65				15	O-90		+2 Port	I-23	36			86	I-63	+6 por
	O·C7	64	51		_1	14	O-87		(Input)	-	37 50	1	100	87	I-64	(Input
	O-C6	63			,	13	O-86			-	38			88	I-65	
	O·C5	62				12	O-85			_	39			89	I-66	
+C port (Output)	O·C4	61 60				11 10	O-84 O-83	+8 port (Output)	-	_	40			90 91	I-67 I-70	
	O-C2	59				9	0.82				42			92	I-70	
	O-C1	58				8	0-81				43			93	I-72	
	O-C0	57				7	0-80		+3 Port	-	44			94	I-73	+7 Por
	N·C/D	56				6	N-8/9		(Input)		45			95	I-74	(Input
	N·C/D	55				5	N-8/9	Common		I-35	46			96	I-75	
Commo-		54				4	N-8/9	minus			47			97	I-76	
minus	N·C/D	-														
pin for	N·C/D N·C/D	53				3	N-8/9	pin for		I-37	48			98	I-77	
minus		-				2	N-8/9 N-8/9	pin for +8/+9 output ports	Common plus pin for +2/+3		49			98	I-77 P-6/7	Commo plus pir for +6/-

* I-00 - I-17 can be used as interrupt signal.

1-00 - 1-17 Cai	1-00 - 1-17 Carl be used as interrupt signal.							
I-00 - I-77	64 input signal pins. Connect output signals from the external device to these pins.							
O-80 - O-F7	64 output signal pins. Connect these pins to the input signal pins of the external device.							
P-0/1 - P-6/7	Connect the positive side of the external power supply. These pins are common to 16 input signal pins.							
P-8/9 - P-E/F	Connect the positive side of the external power supply. These pins are common to 16 output signal pins.							
N-8/9 - N-E/F	Connect the negative side of the external power supply. These pins are common to 16 output signal pins. One pin permissible current of the connector is 0.3A. Please connect necessary number of pins for the corresponding total current of the output 16 channels. When 16 channels are used by the output full ratings (100mA per 1 channel), it is necessary to connect six all.							
N.C.	This pin is left unconnected.							



Pin assignments for connecting to the PCB100/96PS or PCB100WS

The figure below shows the correspondence between the option cable pins and signals.

< Pin assignments for connecting a PCB100/96PS or PCB100WS to the DIO-6464LX-USB >




Common minus pin for +C/+D	N-C/D	B01		A01	N-8/9	Common minus pin for +8/+9
output ports	N-C/D	B02		A02	N-8/9	output ports
	O-C0	B03		A03	O-80	
	O-C1	B04		A04	0-81	
	O-C2	B05		A05	O-82	
+C port	O-C3	B06		A06	O-83	+8 port
(Output)	O-C4	B07		A07	0-84	(Output)
	O-C5	B08		A08	0-85	
	O-C6	B09		A09	O-86	
	O-C7	B10	For connecting the board CNB	A10	O-87	
	O-D0	B11		A11	O-90	
	O-D1	B12	B01 [96] [48] A01	A12	0-91	
	O-D2	B13	BOI	A13	O-92	
+D port	O-D3	B14		A14	O-93	+9 port
(Output)	O-D4	B15		A15	O-94	(Output)
	O-D5	B16		A16	O-95	
	O-D6	B17		A17	O-96	
	O-D7	B18		A18	O-97	
Common plus pin for +C/+D	P-C/D	B19		A19	P-8/9	Common plus pin for +8/+9
output ports	P-C/D	B20		A20	P-8/9	output ports
	N.C.	B21		A21	N.C.	
	N.C.	B22		A22	N.C.	
	N.C.	B23		A23	N.C.	
Unconnected	N.C.	B24		A24	N.C.	Unconnected
	N.C.	B25		A25	N.C.	
	N.C.	B26		A26	N.C.	
	N.C.	B27		A27	N.C.	
	N.C.	B28		A28	N.C.	
Common minus pin for +E/+F	N-E/F	B29		A29	N-A/B	Common minus pin for +A/+B
output ports	N-E/F	B30		A30	N-A/B	output ports
	O-E0	B31		A31	O-A0	
	O-E1	B32		A32	O-A1	
	O-E2	B33		A33	O-A2	
+E port	O-E3	B34		A34	O-A3	+A port
(Output)	O-E4	B35		A35	O-A4	(Output)
	O-E5	B36	Dual L	A36	O-A5	
	O-E6	B37	B48 49 [1] A48	A37	O-A6	
	O-E7	B38 B39		A38	O-A7 O-B0	
	O-F0 O-F1	B40		A39 A40	O-B0	-
		B40 B41			O-B1	
+F port	O-F2 O-F3	B41		A41 A42	O-B2	+B port
(Output)	O-F3	B43		A42 A43	O-B3	(Output)
(= nepato	O-F4	B43		A44	O-B4	
	O-F6	B45		A45	O-B6	
	O-F6	B46		A46	O-B6	1
	011	Dio		11-10	OBI	
Common plus pin for +E/+F	P-E/F	B47		A47	P-A/B	Common plus pin for +A/+B
output ports	P-E/F	B48	OV HONDA TELIEHINI KOCYO	A48	P-A/B	output ports

Unconnected	N.C.	B01				A01	N.C.	Unconnected
	N.C.	B02				A02	N.C.	
	I-40	B03				A03	I-00	
	I-41	B04				A04	I-01	
	I-42	B05				A05	I-02	
+4 port	I-43	B06				A06	I-03	+0 port
(Input)	I-44	B07				A07	I-04	(Input)
	I-45	B08				A08	I-05	1
	I-46	B09				A09	I-06	1
	I-47	B10			1 0074	A10	I-07	1
	I-50	B11	For conn	ecting the b	oard CNA	A11	I-10	
	I-51	B12			7	A12	I-11	1
	I-52	B13	B01	[96] [48	A01	A13	I-12	
+5 port	I-53	B14		\ _		A14	I-13	+1 port
(Input)	I-54	B15				A15	I-14	(Input)
	I-55	B16				A16	I-15	
	I-56	B17				A17	I-16	
	I-57	B18				A18	I-17	
Common plus pin for +4/+5	P-4/5	B19				A19	P-0/1	Common plus pin for +0/+1
input ports	P-4/5	B20				A20	P-0/1	input ports
	N.C.	B21				A21	N.C.	
	N.C.	B22				A22	N.C.	
	N.C.	B23				A23	N.C.	
	N.C.	B24				A24	N.C.	
	N.C.	B25				A25	N.C.	
	N.C.	B26				A26	N.C.	
Unconnected	N.C.	B27				A27	N.C.	Unconnected
	N.C.	B28				A28	N.C.	
	N.C.	B29				A29	N.C.	
	N.C.	B30				A30	N.C.	
	I-60	B31				A31	I-20	
	I-61	B32				A32	I-21	
	I-62	B33				A33	I-22	
+6 port	I-63	B34				A34	I-23	+2 port
(Input)	I-64	B35				A35	I-24	(Input)
	I-65	B36		L .		A36	I-25	
	I-66	B37	B48	1	A48	A37	I-26	
	I-67	B38	([49] [1]		A38	I-27	
	I-70	B39			_	A39	I-30	
	I-71	B40				A40	I-31	
	I-72	B41				A41	I-32	
+7 port	I-73	B42				A42	I-33	+3 port
(Input)	I-74	B43				A43	I-34	(Input)
İ	I-75	B44				A44	I-35]
1	I-76	B45				A45	I-36]
	I-77	B46				A46	I-37	
Common plus pin for +6/+7	P-6/7	B47				A47	P-2/3	Common plus pin for +2/+3
input ports	P-6/7	B48				A48	P-2/3	input ports

 $^{^{\}star}$ [] shows pin numbers specified by HONDA TSUSHIN KOGYO CO., LTD.






	N.C. 19	1		N.C. 19	1	1	
Common plus pin for +8/+9 output ports	P-8/9 18		37 P-A/B Common plus pin for +A/+B output ports	Common plus pin for +0/+1 input ports P-0/1 18		37 P-2/3 fe	ommon plus pin or +2/+3 put por
+9 port (Output)	O-97 17 O-96 16 O-95 15 O-94 14 O-93 13 O-92 12 O-91 11 O-90 10	CNA of PCB100WS connecting to the board CNB 19 8 8 37	36 O-B7 35 O-B6 34 O-B5 33 O-B4 32 O-B3 31 O-B2 30 O-B1 29 O-B0	1-17 17 17 1-16 16 16 15 15 15 15 17 17 17 17	CNA of PCB100WS connecting to the board CNA	36	+3 port (Input)
+8 port (Output)	O-87 9 O-86 8 O-85 7 O-84 6 O-83 5 O-82 4 O-81 3 O-80 2	1 8 8 20	28 O-A7 27 O-A6 26 O-A5 25 O-A4 24 O-A3 23 O-A2 22 O-A1 21 O-A0	1-07 9 1-06 8 1-05 7 7 1-04 6 1-03 5 1-02 4 1-01 3 1-00 2	1 8 8 20		+2 port (Input)
Common minus pin for +8/+9 output ports	N-8/9 1		20 N·A/B Common minus pin for +A/+B output ports	N.C. 1		20 N.C.	
	N.C. 19	I		N.C. 19			
Common plus pin for +C/+D output ports	P-C/D 18		37 P-E/F Common plus pin for +E/+F output ports	Common plus pin for +4/+5 input ports		37 P-6/7 F	ommon plus pin or +6/+7
+D port (Output)	O·D7 17 O·D6 16 O·D5 15 O·D4 14 O·D3 13 O·D2 12 O·D1 11 O·D0 10	CNB of PCB100WS connecting to the board CNB	36 O-F7 35 O-F6 34 O-F5 33 O-F4 32 O-F3 31 O-F2 30 O-F1 29 O-F0	1-57 17 176 166 16 1-55 15 15 15 15 17 17 17	CNB of PCB100WS connecting to the board CNA		+7 port (Input)
+C port (Output)	0·C7 9 0·C6 8 0·C5 7 0·C4 6 0·C3 5 0·C2 4 0·C1 3 0·C0 2	1 8 20	28 O-E7 27 O-E6 26 O-E5 25 O-E4 24 O-E3 23 O-E2 22 O-E1 21 O-E0	1-47 9 1-46 8 1-45 7 +4 port 1-44 6 (Input) 1-43 5 1-42 4 1-41 3 1-40 2	1 8 8 20		+6 port (Input)
Common minus pin for +C/+D	N-C/D 1		20 N-E/F pin for +E/+F	N.C. 1		20 N.C.	



Connecting Input Signals

Connect the input signals to a device which can be current-driven, such as a switch or transistor output device. The connection requires an external power supply to feed currents. This product inputs the ON/OFF state of the current-driven device as a digital value.

Input Circuit

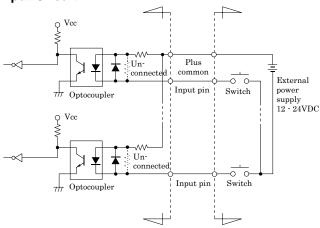


^{*} I-xx represents the input pin.

The input circuits of interface blocks of this product is illustrated in the image above.

The signal inputs are isolated by Optocouplers (compatible with current sink output). This product therefore requires an external power supply to drive the inputs. The power requirement for each input pin is about 5.1mA at 24VDC (about 2.6mA at 12VDC).

Connecting a Switch




When the switch is ON, the corresponding bit contains 1. When the switch is OFF, by contrast, the bit contains 0.

Connecting Output Signals

Connect the output signals to a current-driven controlled device such as a relay or LED. The connection requires an external power supply to feed currents. This product controls turning on/off the current-driven controlled device using a digital value.

Output Circuit

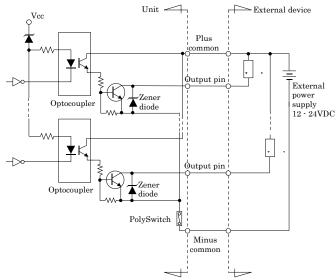

^{*} O-xx represents the output pin.

The output circuits of interface blocks of this product is illustrated in the image above. The signal output section is an Optocoupler isolated, open-collector output (current sink type). Driving the output section requires an external power supply.

The rated output current per channel is 100mA at maximum.


The output section can also be connected to a TTL level input as it uses a low-saturated transistor for output. The residual voltage (low-level voltage) between the collector and emitter with the output on is 0.5V or less at an output current within 50mA or at most 1.0V at an output current within 100mA.

A zener diode is connected to the output transistor for protection from surge voltages. A PolySwitch-based overcurrent protector is provided for every 8 output transistors. When the overcurrent protector works, the output section of this product is temporarily disabled. If this is the case, turn of the power to the PC and the external power supply and wait for a few minutes, then turn them on back

⚠ CAUTION

When the PC is turned on, all output are reset to OFF.


Connection to the LED



When "1" is output to a relevant bit, the corresponding LED comes on. When "0" is output to the bit, in contrast, the LED goes out.




Example of Connection to TTL Level Input

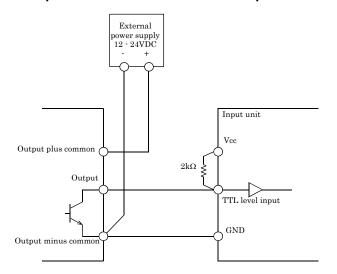

Connecting the Sink Type Output and Sink Output Support Input


The following example shows a connection between a sink type output (output side) and a sink output support input (input side). Refer to this connection example when you connect such this product to each other.

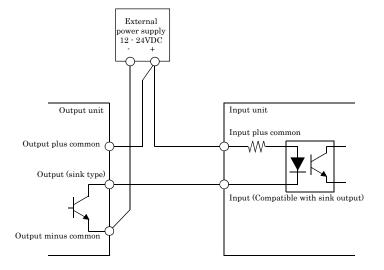


Connection with 5VDC Power Supply for Self-power

This product must be connected with 5VDC power supply (in a self-powered state).

Connect with 5VDC power supply by using +5VDC input pin.



When using the attached AC adapter [POA200-20], please connect directly to the input terminals.



⚠ CAUTION

Connect 5VDC power supply to the main unit. Next, connect the USB cable to the PC. Do not turn it on or off when using. If you remove, USB cable is first and then 5VDC power supply.

When the USB module is not used, leave the AC adapter unplugged.

Continuously using the AC adapter heated affects its life. Use the AC adapter not in a closed place but in a well-ventilated place not to be heated.

Difference from DIO-6464L-PE and PIO-64/64L(PCI)H

Item	DIO-6464LX-USB	DIO-6464L-PE	PIO-64/64L(PCI)H
Current consumption (Max.)	5VDC 550mA	3.3VDC 600mA	5VDC 500mA
Bus specification	USB Specification 2.0/1.1 standard	PCI Express Base Specification Rev. 1.0a x1	PCI(32bit, 33MHz, Universal key shapes supported)
Physical dimensions (mm)	180(L) x 140(D) x 34(H) (No protrusions)	169.33(L) x 110.18(H)	176.41(L) x 106.68(H)
Weight	300g (Not including the USB cable, attachment)	215g	215g